



GLR2702240 and GLR43302240

Setup and programming instructions
for the 2 channel Gigalink™ receiver

GLR2702240 and GLR43302240

Setup and programming instructions for the 2 channel Gigalink™ receiver

FEATURES

- › Supply connection – 240VAC or 110 to 120 VAC for international markets
- › Two channel receiver with relay outputs
- › Over 4 billion code combinations
- › Highly sensitive receiver input stage
- › Crystal controlled for high reliability
- › Can store unlimited number of transmitters
- › Modes include Momentary, Flip Flop and latching
- › Optional QM150 bracket available for easy mounting to cases or walls

DESCRIPTION

The Gigalink™ receivers use advanced remote control technology available in the world today by enabling just about all remote control applications to be operated with a single set of remote controls. No need to stock numerous brands or models just the Gigalink™ remotes. The Gigalink™ receiver's use a micro-controller to store encrypted 32-bit digital code. The Gigalink™ code gives the user more than four billion code combinations and several special features.

TECHNICAL DATA

Supply Voltage	240 Volts AC mains. 110, 115 or 120 VAC available on request only.
Current Consumption	14mA standby on 240VAC
Frequencies for GLR2702240 Frequencies for GLR43302240	27.195 (Standard), 27.045, 27.145 and 27.455 MHz 433.920 (Standard), 433.664, 433.408, 433.152MHz
Relay Output	Rated at 16 Amps resistive load or 8 Amps inductive load at 240VAC
Antenna	ANT27 series (27MHz Series) or ANT433 series (433MHz Series)
Compatible Transmitters	GLT27 MHz series, GLT433 MHz series

RECEIVER SETUP INSTRUCTIONS

The transmitter/receiver can be channelised or single channel programmed.

Channelised Programming

This is used to program all channels from a multi channel receiver to a multi channel transmitter.

Channelised programming can be achieved by following the steps below:

- Step 1:** Connect power to the GIGALINK™ receiver. **Make sure all switches on the mode dipswitch are off.**
- Step 2:** Momentarily short the two CC pins on the receiver board. (This sets all the channels to a random code. If there are transmitters previously programmed, they will have to be re-programmed when CC pins are shorted.) *Do not do this step if you want to keep previously programmed transmitters to operate the receiver.*
- Step 3:** Connect the multi channel transmitter to the multi channel receiver by inserting the GIGALINK™ cable into the transmitters and receivers 2.5-mm coding socket. (This will activate the programming mode and is indicated by the red light (LED), on the transmitter that must remain “on”)
- Step 4:** Activate any two channels simultaneously on the multi channel transmitter for one second, LED should blink twice to confirm code programming and then switch “off”.
- Step 5:** Disconnect GIGALINK™ cable.

Repeat steps 3 to 5 to program another multi channel transmitter.

SINGLE CHANNEL PROGRAMMING

This is used for programming one channel at a time to the transmitter. Single channel programming can be achieved by following the steps below:

- Step 1:** Connect power to the GIGALINK™ receiver. **Make sure all switches on the mode dipswitch are off.**
- Step 2:** Momentarily short the two CC pins on the receiver board. (This sets all the channels to a random code. If there are transmitters previously programmed, they will have to be re-programmed when CC pins are shorted.) *Do not do this step if you want to keep previously programmed transmitters to operate the receiver.*
- Step 3:** Select the receiver channel, to be programmed, by setting the 2-way dip switch. See dip switch table below.

Dip Switch Setting		Receiver Channel (Output Relay)	Receiver Type
1	2		
Off	Off	1	GLR2702240/ GLR43302240
On	Off	2	GLR2702240/ GLR43302240

- Step 4:** Connect the transmitter to the receiver by inserting the GIGALINK™ cable into the transmitters and receivers 2.5-mm coding socket. (This will activate the programming mode and is indicated by the red light (LED) on the transmitter that must remain "on")
- Step 5:** Activate one of the selected channels on the transmitter for approximately one second, LED should blink twice to confirm code programming and then switch "off".
- Step 6:** Disconnect GIGALINK™ cable.

Repeat steps 3 to 6 to program another transmitter channel.

SPECIAL PROGRAMMING FEATURE FOR GIGALINK™

Forward Programming

Enables GIGALINK™ transmitters to activate unlimited number of receivers simultaneously. GIGALINK™ receivers have an additional programming feature, known as forward programming. This forward programming allows the programmer to program the transmitter code into the GIGALINK™ receivers.

Forward Programming Steps:

- Step 1:** Connect power to the receiver and transmitter.
- Step 2:** Place a jumper across the CC pins of the receiver.
- Step 3:** Connect the transmitter and receiver using the coding cable.
- Step 4:** Press the transmitter button for 2 seconds.
- Step 5:** Remove the coding cable.
- Step 6:** Remove the jumper from the CC pin.


The receiver is now programmed with the transmitter's code. Repeat the above steps to program another receiver.

DIFFERENT MODES FOR THE OUTPUT

Modes are user selectable from the 2-way dipswitch. **Dipswitch 1 corresponds to output channel 1 and dipswitch 2 corresponds to output channel 2.**


Momentary Mode	If the dipswitch is "off" the output will be in momentary mode.
Flipflop Mode	If the dipswitch is "on" the output will be in flipflop mode.
Latching Mode	If latching is required (Relay stays on until power is removed) the latching link should be inserted and soldered into the two holes to the right of the 2-way dipswitch. This will enable the corresponding outputs to latching.

ACCESSORIES AVAILABLE

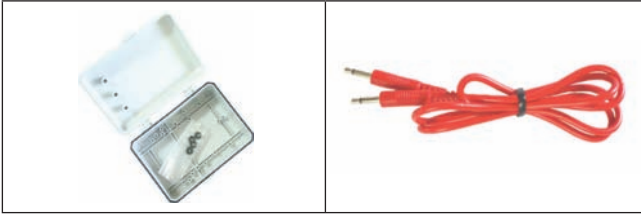

Weatherproof Case
for receiver unit

Gigalink™ Coding Cable
For coding Gigalink
transmitters to receivers

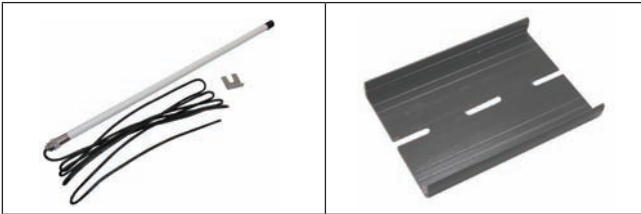

Suitable Antennas
ANT27 series (27MHz Series) or
ANT433 series (433MHz Series)

QM150
Quick Mount for easy mounting of
receivers on wall or cases

TROUBLESHOOTING

This section contains helpful troubleshooting tips and solution.

Symptom	Solution
Receiver not responding to transmitter after programming.	Try to program the transmitter again, but this time with the battery connected to the transmitter. Check if GIGALINK™ cable is inserted correctly
Transmitter activates wrong channel on a multi-channel receiver.	Wrong dip switch setting while programming the receiver. Use the dip switch table and program again
Transmitter has short range.	Check receiver antenna connection. If you are using a shielded coax cable, check that the shield is connected to the negative and the coaxial core to the antenna terminal.
Led is flashing on the transmitter.	Replace battery.

CUSTOMER SUPPORT

If your transmitter and receiver are still not operating properly, contact Elsema's support office at:

Phone: +61 (2) 9609 4668

Fax: +61 (2) 9725 2663

or you can visit our web site at www.elsema.com for the latest updates.

ELSEMA PTY LTD

3/10 Hume Road
Smithfield NSW 2164 Australia

P 02 9609 4668 **F** 02 9725 2663

W www.elsema.com

Local Distributor

ELSEMA 