

PentaFOB® Programming Instructions

Coding the PentaFOB® remotes and receivers can be done in 2 different ways.

1. Remote to Receiver
2. Remote to Remote

Remote to Receiver

1. Check that all switches are “OFF” on the receivers 12-way dip switch
2. Press and hold the program button on the receiver
3. Press the remote button for 2 seconds, receiver LED will flash and then turn Green
4. Release the button on the receiver and the remote
5. Press remote control button to test the receiver output

Remote to Remote (you should be near the receiver for this procedure)

Only follow the following procedure if your receiver has a red marking as shown in the picture.

If your receiver does not have this marking, follow the procedure which is in the orange instructions.



1. Open the case of a remote control that is already programmed and press
and release the program button on the back of the board (*The receiver enters learning mode*)
2. Press the button of the remote in step 1 which activates the receiver
3. Press the button on the new remote which needs to be programmed for 2 seconds
4. Press the program button again of the remote in step 1 (*The receiver exits learning mode*)
5. Press the new remote control button to test the receiver output

Deleting Receivers Memory

Short the Code Reset pins on the receiver for 10 seconds. This will delete all the remotes from the receiver’s memory.

PentaFOB® Programmer

This programmer allows you to add and delete certain remotes from the receiver’s memory. This is used when a remote control is lost or a tenant moves from the premises and the owner wants to prevent un-authorised access.

PentaFOB® Backup Chips

This chip is used to backup or restore the contents of a receiver. When there are 100’s of remotes programmed to a receiver the installer normally backups the receiver memory in case the receiver is damaged.

Remote to Remote (you should be near the receiver for this procedure)

*Only follow the following procedure if your receiver does not have a red marking as shown in the picture.
If your receiver has a red marking, follow the procedure which is in the red instructions.*



1. Open the case of a remote control that is already programmed and press and release the program button on the back of the board
2. Press the new remote control button for 2 seconds
3. Press the new remote control button again to test the receiver output