



Built-in Receiver

Normally Closed  
User can change to  
Normally Open

Adjust pot to 20% higher  
than motor current

Overload Reset

L1  
L2  
L3  
Neutral  
Earth

3 Phase Motor