

GLR08 GIGALINK™ RECEIVER SETUP INSTRUCTIONS

The transmitter/receiver can be single or channelised code programmed.

Single Code Programming

This is used for programming one channel at a time to the transmitter. Single code programming can be achieved by following the steps below:

- Step 1: Connect power to the GIGALINK™ receiver.
- Step 2: Momentarily short the two CC pins on the receiver board. (This sets all the channels to a random code. If there are transmitters previously programmed, they will have to be re-programmed when CC pins are shorted.)
- Step 3: Select the receiver channel, to be programmed, by setting the 3-way dip switch. See dip switch table below.

Dip Switch Setting			Receiver Channel
1	2	3	
Off	Off	Off	1
On	Off	Off	2
Off	On	Off	3
On	On	Off	4
Off	Off	On	5
On	Off	On	6
Off	On	On	7
On	On	On	8

- Step 4: Connect the transmitter to the receiver by inserting the GIGALINK™ cable into the transmitter and receiver 2.5-mm socket. (This will activate the programming mode and is indicated by the red light (LED) on the transmitter that must remain “on”)
- Step 5: Press one of the selected channels on the transmitter for approximately one second, LED should blink twice to confirm code programming and then switch “off”.
- Step 6: Disconnect GIGALINK™ cable.

Repeat steps 3 to 6 to program another transmitter channel.

Channelised Code Programming

This is used to program all channels from a multi channel receiver to a multi channel transmitter. Channelised code programming can be achieved by following the steps below:

- Step 1: Connect power to the GIGALINK™ receiver and make sure all switches on the mode dipswitch are off.
- Step 2: Momentarily short the two CC pins on the receiver board. (This sets all the channels to a random code. If there are transmitters previously programmed, they will have to be re-programmed when CC pins are shorted.)
- Step 3: Connect the multi channel transmitter to the multi channel receiver by inserting the GIGALINK™ cable into the transmitter and receiver 2.5-mm socket. (This will activate the programming mode and is indicated by the red light (LED), on the transmitter that must remain “on”)

Step 4: Activate any two channels simultaneously on the multi channel transmitter for one second, LED should blink twice to confirm code programming and then switch “off”.

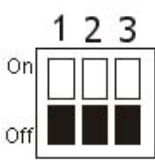
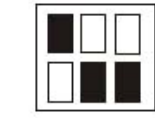
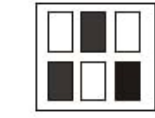

Step 5: Disconnect GIGALINK™ cable.

Repeat steps 3 to 5 to program another multi channel transmitter.

Mode Setting

When the GIGALINK™ cable is disconnected the 3-way dip switch functions as a mode selector for the output. User should set the receiver mode correctly. See below table for different mode setting.

GLR08 Mode Settings

DIP Switch Mode Settings	
The output relay will respond in the following manner when receiving the correct signal from a transmitter	
	"All Momentary": Relay on, only while correct signal is received
	"All Flip-Flop": Outputs alternate at every correct incoming signal
	"Momentary & Flip-Flop": Outputs 1-4 are momentary & 5-8 are flip-flop
	"Latching on": Outputs will be on until supply to receiver is momentarily interrupted

Troubleshooting

This section contains helpful troubleshooting tips and solution.

Symptom

Receiver not responding to transmitter after programming.

Solution

Try to program the transmitter again, but this time connect battery to the transmitter. If transmitter only programs when the battery is connected, return transmitter to Elsema.

Transmitter activates wrong channel on a multi-channel receiver.

Check if GIGALINK™ cable is inserted correctly
Wrong dip switch setting while programming the receiver. Use the dip switch table and program again

Transmitter has short range.

Check receiver antenna connection. If you are using a shielded coax cable, check that the shield and core are connected probably.

Led is flashing on the transmitter.

Replace battery.

Customer Support

If your transmitter and receiver are still not operating properly, contact Elsema's Support Office at:

Phone: 61 (2) 9609 4668

Fax: 61 (2) 9725 2663

or you can visit our web site at <http://www.elsema.com> for the latest updates.